

AATA 2 VOIP ANALOG TERMINAL ADAPTER

Quick Guide

The AATA2 converts the VOIP network to Analog output. Pach and Company Inc. distributes the AATA2 as a package, in conjunction with our products in the USA only. Activation is required. Nominal monthly fee and tax are required. **INDOOR USED ONLY. DO NOT USE THE AATA2 FOR ANY OTHER PRODUCTS OTHER THAN COMPATIBLE PACH AND COMPANY INC. TELEPHONE ENTRY SYSTEMS.**

THIS DEVICE COMES WITH A 24 MONTH WARRANTY FROM PACH AND COMPANY. CALL PACH AND COMPANY FOR SUPPORT AND WARRANTY AT 949-498-2951.

The package contents the following:

AATA2 , Ethernet cable, Power Supply and USB Extension

ACTIVATE THE AATA2

1. Plug the AATA2 into the computer USB Port
2. Follow the on-screen prompts to activate your AATA2
3. Now You are ready to use the AATA2, Unplug the AATA2 from the computer
4. Connect the RJ11 port on the AATA2 to your Pach and Company Inc. Telephone entry device
5. Plug the AATA2 Ethernet port to your Router or Switch
6. Use the power supply included and plug the AATA2 USB to the Power supply
7. Plug the power supply to the 120VAC power source. Wait for about 5 minutes
8. Press # on the Telephone Entry Systems, you must hear a dial tone



PACH AND COMPANY INC.

CALIFORNIA

888-678-7224

949-498-2951